Pyle Street Blast 1000 Watt Powered Bluetooth (NFC) Tube Speaker BoomBox

Instruction Manual

PBMSPG100
WWW.Pyleaudio.com

Please read this manual carefully before operating and save it for future reference.

LOCATION OF CONTROLS

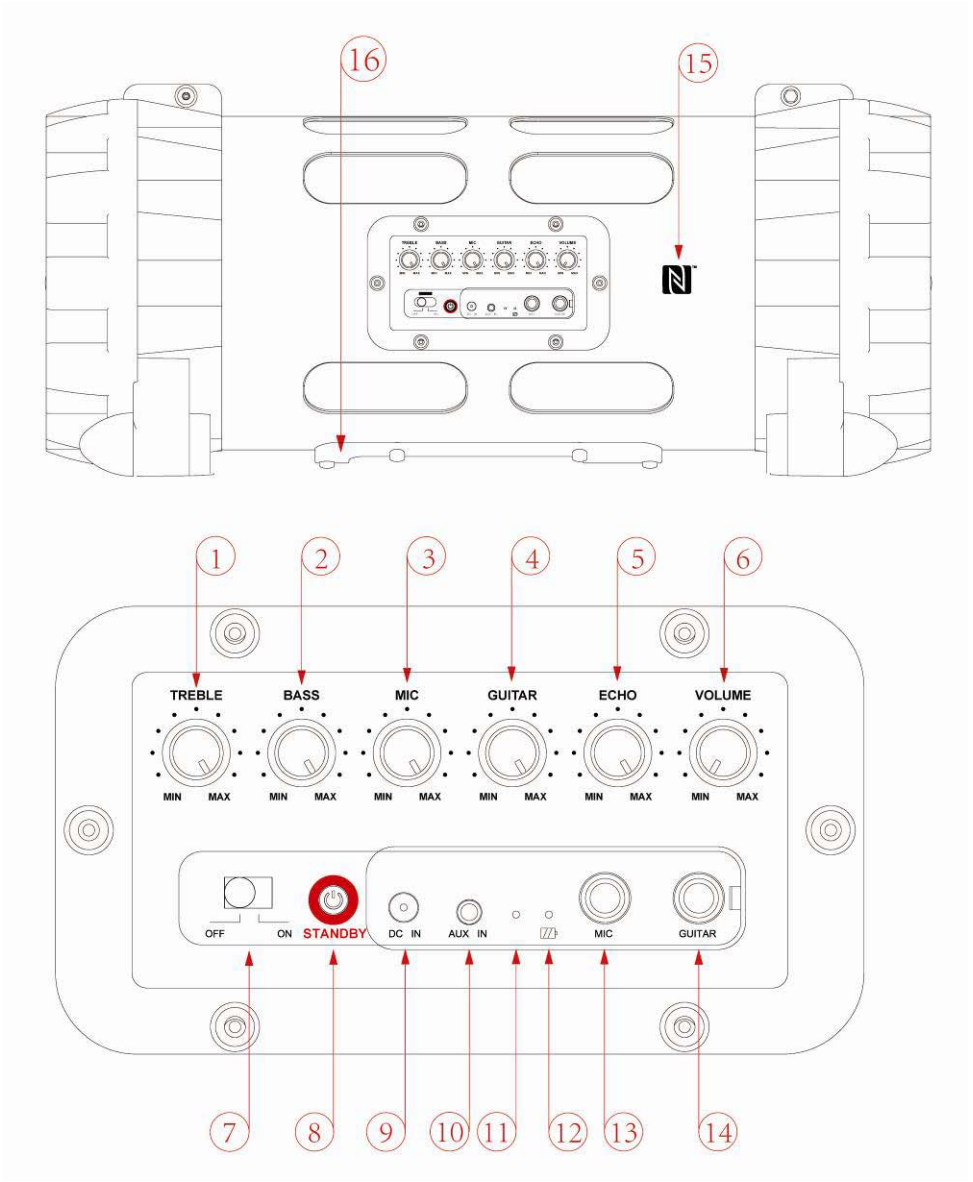

OPERATING INSTRUCTIONS

1. TREBLE LEVEL CONTROL
2. BASS LEVEL CONTROL
3. MICROPHONE INPUT LEVEL CONTROL
4. GUITAR INPUT LEVEL CONTROL
5. ECHO LEVEL CONTROL
6. VOLUME LEVEL CONTROL
7. POWER ON/OFF SWITCH
8. STANDBY BUTTON
9. DC IN JACK
10. AUX IN JACK
11. POWER INDICATOR
12. BATTERY INDICATOR
13. MICROPHONE INPUT JACK
14. GUITAR INPUT JACK
15. NFC AREA
16. BATTERY COMPARTMENT

CHARGE THE BATTERY (IF EQUIPPED)

Before using the speaker, you must charge the battery. When the battery is charging, the **BATTERY INDICATOR** lights solidly. After the battery has fully charged, the light switches off.

1. Connect the AC adaptor to the **DC IN JACK** of the speaker firmly, and plug it into a wall outlet.
2. When the battery is fully charged, first disconnect the AC adaptor from the speaker, then from the wall outlet.

POWER SOURCE

1. Slide the **POWER ON/OFF** switch to “ON” positon, the speaker is in standby mode.
2. You can now press the **STANDBY** button to turn on the speaker.
3. Slide the **POWER ON/OFF** switch to “OFF” positon, and pull the AC adaptor out of the wall outlet if you want to switch off completely.

BLUETOOTH FUNCTION

PAIR THE BLUETOOTH DEVICE

Before using your speaker with a Bluetooth device for the first time, you must pair and connect it to the Bluetooth device. Press the **STANDBY** button to turn on the speaker, it will enter into the Bluetooth mode automatically, and the **POWER INDICATOR** starts to flash fast. Press the **STANDBY** button again, the **POWER INDICATOR** starts to flash slowly. The speaker is now in pairing mode.

OPERATING INSTRUCTIONS

PAIR THE SPEAKER USING NFC

1. With Near Field Communication (NFC), you can easily pair and connect the speaker to Android device with NFC.
2. If the Android device supports NFC, activate its NFC feature, and touch the NFC area of the speaker with the NFC area of your Android device. The speaker pairs and connects to the Android device automatically. For details on NFC, see the user guide of the Android device.

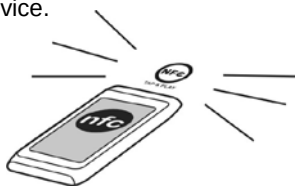

3. For other Bluetooth device, pair the speaker manually.

PAIR THE UNIT MANUALLY

1. Verify that the Bluetooth function of Bluetooth device is enabled.
2. Choose the Bluetooth menu in your Bluetooth device, and from the found devices, select the “P127J”. If you are prompted to enter the PIN code, please enter "0000" (four zeros).
3. For more information, see the user manual of Bluetooth device.
4. After a successful pairing, play the music from the Bluetooth device.

Note:

1. Only one Bluetooth device can be connected to the speaker. If the speaker is already connected to another Bluetooth device, the speaker will not appear in the Bluetooth menu of your Bluetooth device.
2. When you turn off/on the speaker or the Bluetooth device, the speaker will connect to the last Bluetooth device it was used with automatically within 10 seconds. Otherwise, you need to connect it manually on the Bluetooth menu in your Bluetooth device.
3. Depending on the device manufacturer, some Bluetooth devices need to perform the pairing again.

AUX IN FUNCTION

1. Connect an audio cable (not included) to the **AUX IN JACK** of the speaker and to the audio output socket on the external audio devices such as MP3 player, discman, etc. The **POWER INDICATOR** turns red.
2. Play from an external audio device.

Note: When the speaker is connected to the **AUX IN JACK**, Bluetooth function is disabled.

OPERATING INSTRUCTIONS

CONNECTING A MICROPHONE/GUITAR

Using a microphone or a guitar, you can mix its sound with a source sound.

CAUTION

DO NOT connect a bass guitar to the **MIC/GUITAR INPUTJACK**, as it may damage the speaker.

1. Turn the **MIC/GUITAR LEVEL CONTROL** fully counterwise.
2. Connect a microphone or a guitar to the **MIC/GUITAR INPUT JACK** of the speaker.
3. Select the Bluetooth or AUX IN as the source.
4. Strat playback of the source.
5. Turn the **MIC/GUITAR LEVEL CONTROL** to adjust the volume.

TO ADJUST THE VOLUME

Turn the **VOLUME LEVEL CONTROL** to adjust the volume of the speaker.

CONTROL THE TREBLE/BASS

Turn the **TREBLE/BASS LEVEL CONTROL** to adjust the treble/bass effect.

CONTROL THE ECHO

Turn the **ECHO LEVEL CONTROL** to adjust the echo effect.

SPECIFICATIONS

- Audio Output: 1000 watts = 500W (L) + 500W (R)
- Connectivity
    - o 3.5mm Aux In Jack
    - o DC IN Jack
- Power Requirement
    - o AC 100-220V, 50/60Hz
    - o Rechargeable Batteries (if equipped)
- Unit Dimensions: 24.5”(W) x 10”(D) x 10”(H) inches